MP502FM / MP504FM Sweex Black Onyx MP4 Player

Introduction

- Do not expose the Sweex Black Onyx MP4 Player to extreme temperatures. Do not place the device in direct sunlight or in the direct vicinity of heating elements.
- Do not use the Sweex Black Onyx MP4 Player in extremely dusty or moist surroundings.
- Protect the device against powerful shocks or jolts - they may damage the internal electronics.
- Never attempt to open the device yourself - it will cause the warranty to lapse.

Software installation

Software is delivered with the Sweex Black Onyx MP4 Player. This software is freeware and Sweex does not provide any support.

With the software you can convert various types of video files into a compact AVI format, so that these can be played on the Sweex Black Onyx MP4 Player; AVI, MPG, MPEG, MP4, VOB, RM, ASF, WMV, MKV and DAT

Install the software by placing the Sweex CD-ROM in the drive. The CD-ROM will automatically start. Select "Install Software Utilities".

Following the installation of the software you start the software by double clicking this icon.

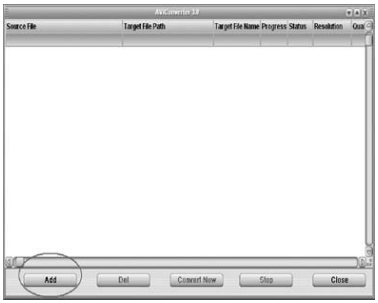

Click on "Add" to add a movie file for conversion.

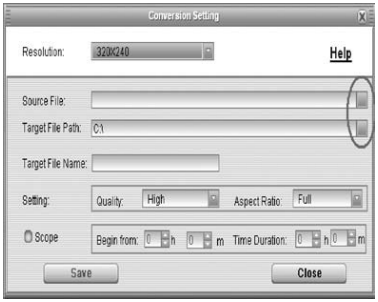

Click on the right side of the line at "Source File" to select the file on your computer.
At "Target File" you select where the converted file is going to be saved.

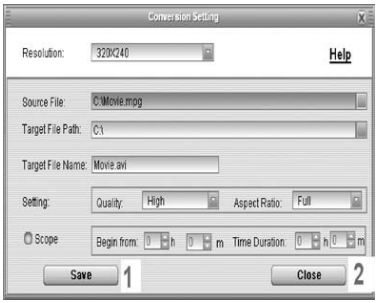

Click on "Save" once you have selected the file.
Possibly select multiple movie files or click on "Close".

Click on "Convert Now" to start the conversion.

Transferring files to the Sweex Black Onyx MP4 Player

Connect the Sweex Black Onyx MP4 Player to the computer with the also supplied USB cable. Windows will detect the device and will allocate a drive letter referring to the same as exchangeable disk under the name "Sweex MP4". A drive letter will also appear for the T-Flash memory slot.

Now you can manage your music and video files by means of Windows Explorer. You can also store other types of files and documents on the Sweex Black Onyx MP4 Player and simultaneously use it as a USB memory stick.

Control

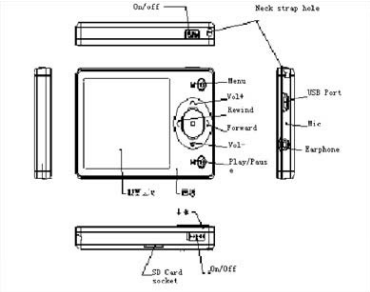

Buttons on the front side:

M : Open menu, select menu option
> : To the next menu option, forward
< : To the previous menu option, rewind
v : Volume up
^ : Volume down
▶II : Pause/restart

⏻ : On/Off button
⬭ : On/Off switch

Switching on the Sweex Black Onyx MP4 Player

A main switch is located on the side. ⬭ Switch this to "ON". By briefly pressing the ⏻ button you switch the Sweex Black Onyx MP4 Player on or off.

To release the Sweex Black Onyx MP4 Player from stand-by you briefly press the ⏻ button.

To secure the soft-touch control of the Sweex Black Onyx MP4 Player you can use the HOLD function. Do this by means of the following key combination:

Hold on/off: press ▶II + ⏻ for 3 seconds

When switching on the Sweex Black Onyx MP4 Player you will arrive at the menu. To arrive at the main menu from any point of the menu you press the **M** button for three seconds.

The menu

Scroll through the menu with the **>** and **<** buttons. Select the menu option with **M** and by selecting "Exit" you go back one step. In the various sub-menus you scroll by means of the up ∧ and down ∨ buttons. With the button to the right you always go back one menu item.

The menu of the Sweex Black Onyx MP4 Player is available in multiple languages. Go to "Settings" and select "System" by selecting the sixth line and then **M**. The first of the three menu options is Language Settings. Click **M** to select and select the third line for "English".

The following languages are available: English, French, German, Italian, Spanish, Chinese, Japanese, Portuguese, Russian.

The options in the main menu are:

Settings	: Device settings and information
Music	: Playing music files
Video	: Playing video files
Radio	: Radio
Photo	: Looking at images
Text	: Reading text files
Record	: Recording audio
Game	: Games
Explorer	: Managing files

Playing music and video files

For music, go to the menu option "Music". For movie, go to "Movie". Press **M** to look at your files. Press **M** to play. Also use ▶II to stop or pause. With the **>** and **<** buttons you go to the next or the previous file whilst playing.

To change the volume whilst playing music or video, you press the ∨ and ∧ buttons.

Repeat function and equalizer settings can be found under the menu option "Settings".

Recording audio

To record audio, go to the menu option "Record". The recording settings can be found under the menu option "Settings".

To start recording you press ⏻. To pause and resume recording you use the same ⏻ button. To stop recording you click on **M**.

The recorded files will be numerated and saved in the "Voice" folder of the player.

Charging of the Sweex Black Onyx MP4 Player is possible with the also supplied USB cable by means of a free USB port of the computer.

Warranty

All products under the Sweex brand are warranted for a period of three years. We do not grant support or warranties for any software and/or (rechargeable) batteries included. Settlement of guarantee only takes place via the dealer where you have purchased the product in question.

The rightful owner has and retains title to all brand names and related rights mentioned in this manual.